


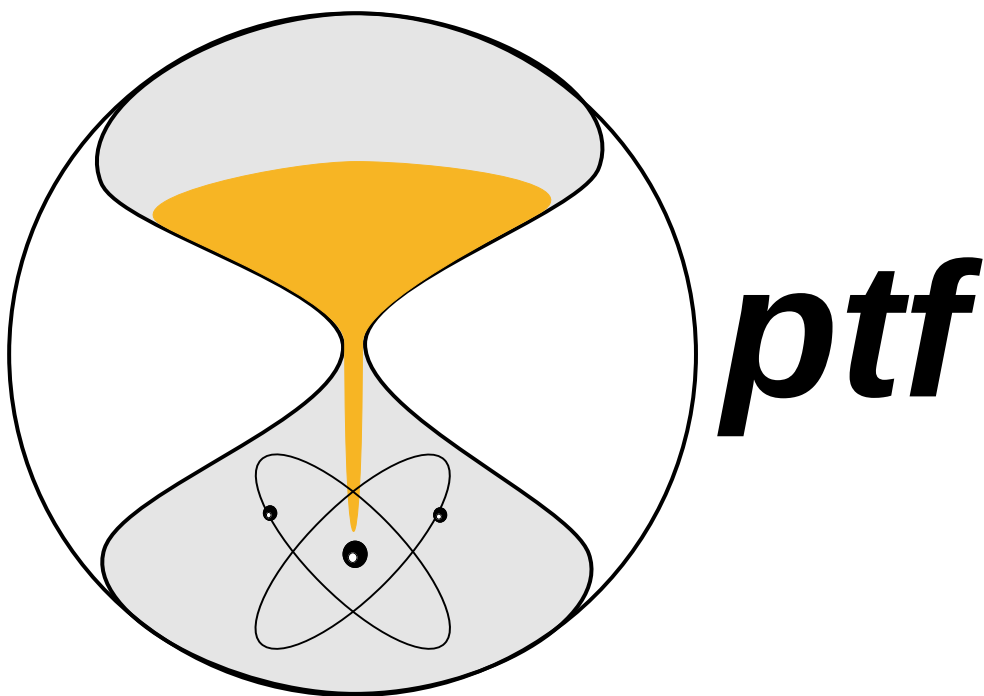

Precise Time and Frequency, LLC

***ptf* 1208A Optical Distribution
Transmitter**

Operation and Maintenance Manual



Document # 11123
Revision B

Certificate of Conformance

This certificate confirms that the following equipment:

Unit type: ***ptf*** 1208A Optical Distribution Transmitter

Serial Number:

has successfully passed a FINAL ACCEPTANCE TEST and conforms in all respects of form, fit, and function to current specifications, including regulatory requirements and certifications.

Inspected and verified by:

Date:

For Precise Time and Frequency, LLC

Declaration of Conformity

This certificate confirms that the following equipment:

Unit type: **ptf 1208A** Distribution Amplifier

is in conformity with the relevant provisions of the following standard(s)
or other normative document(s):

EU EMC Directive 89/336/EEC:

EN55022	Limits and methods of measurements of radio disturbance characteristics of information technology equipment
EN61000-3-2 (2001)	Limits for harmonic current emissions (equipment input current up to and including 16A per phase)
EN61000-3-3 (1995)	Limitation of voltage fluctuations/flicker in low voltage supply systems for equipment with rated current # 16A
EN55024 (1998)	Information technology equipment – immunity characteristics - Limits and methods of measurement
EN61000-4-2 (1995)	Electrostatic discharge immunity
EN61000-4-3 (1997)	Radiated, radio frequency, electromagnetic field Immunity
EN61000-4-4 (1995)	Electrical fast transient/burst immunity
EN61000-4-5 (1995)	Surge Immunity
EN61000-4-6 (1996)	Immunity to conducted disturbances, induced by radio frequency fields
EN61000-4-8 (1994)	Power frequency magnetic field immunity
EN61000-4-11 (1994)	Voltage Dips, short interruptions and voltage variations immunity

EU Low Voltage Directive 72/23/EEC:

EN 60950-1 (2000)	Safety of Information Technology Equipment, including electrical business equipment
-------------------	---

Introduction

Congratulations on your purchase of the **ptf** 1208A Optical Distribution Transmitter !

This product meets the highest standards of quality and reliability, and Precise Time and Frequency, Inc wants to insure that you enjoy the maximum benefits and functionality that this unit can provide.

The technology within this unit uses the decades of experience in time and frequency applications of our engineering team, to provide a unit that is highly advanced, and gives a very powerful feature set in an inexpensive and compact package,

Operation of the unit is straightforward and the contents of this manual are designed to provide a basic understanding of the product, set-up and functionality, and procedures for maintenance and repair.

If you have any questions or concerns, please do not hesitate to contact our technical service department who will be pleased to provide assistance.

Please help us to live up to our stated objectives, our company motto is:

KNOW THE NEEDS AND EXPECTATIONS OF YOUR CUSTOMER...THEN DELIVER!

Once again, thank you for purchasing our product, and we look forward to you utilizing Precise Time and Frequency, Inc. for your future time and frequency instrumentation needs.



President
Precise Time and Frequency, LLC.

CONTENTS

1. Technical Overview
2. Specifications
3. Unpacking/Inspection/Installation
4. Operation
5. Maintenance
6. Contact Information – Technical Assistance

1. ***ptf* 1208A Optical Distribution Transmitter - Technical Overview**

The ***ptf*** 1208A uses at its heart a design combining the latest technology in low noise components, with decades of experience in low noise layout design, to buffer high quality input signals while preserving the integrity of input signal by minimizing any noise addition. In its standard configuration the unit incorporates 4 x optical transmitter outputs to transmit a fiber optic signal over multi mode fiber optic cable, however for different applications the configuration may vary, including additional optical outputs, auto switched inputs, and single mode fiber in place of the standard multi mode.

The unit uses two stages of input signal buffering to distribute the input signal to 12 separate outputs. In the standard configuration there are 8 copper and 4 optical outputs. The two stage buffering insures maximum isolation between individual output signals.

2. ptf 1208A Optical Distribution Transmitter - Specifications

2.1.1. Electrical

RF Output (eight)

Frequency Range 900kHz to 10MHz

Level 5V CMOS

Load Impedance 50.

Isolation >90 dB

Connectors BNC

Optical Output (4)

Frequency Range 900kHz to 10MHz

850nm multi mode fiber outputs

Connectors : ST

RF Input

Frequency Range 900kHz to 10MHz

Level 5 V CMOS

Alarm Output

Summary alarm indicates failure of any output signal

Non-alarm condition: Relay energized (fail safe)

Connector: 9 pin D-male

Note:

Output combinations may vary.

In some configurations the input may be optical (either 850nm multi mode or 1310nm single mode)

An input auto switch may be optionally fitted. In this case the switch will default to input A. If input A faults, the switch will automatically select input B.

Alarm Indicator

Red LED,

2.1.2. Power Input

Standard AC power input:

Input voltage

85 to 264 V AC

Input Frequency range

45 to 65 Hz

2.1.3. Dimensions

Chassis

Height 1.75 Inches.

Width 17 Inches

Depth 12 Inches Maximum.

2.1.4. Weight

Chassis

< 10 pounds

2.1.5. Environmental

Operating Temp:

-0 C to +55 C

Humidity

to 95% RH non-condensing

3. Unpacking/Inspection/Installation

3.1. Unpacking/Inspection

The **ptf** 1208A Distribution amplifier together with accessories is shipped in a custom designed package. Upon receipt the equipment should first be visually inspected for any signs of visible damage.

If visible damage is apparent immediate notification should be given to both Precise Time and Frequency, Inc., and the carrier responsible for shipment. Do not discard the shipping container, which should be made available for inspection by the carrier.

For purposes of unit reference, the unit serial number located on the rear panel of the unit should be quoted in all communications.

3.2. Chassis Installation

The **ptf** 1208A chassis is supplied with rack ears ready for simple installation into a standard 19-inch rack frame/cabinet.

For adequate support when mounted into the rack, a rear supporting bar or tray should be used as the rack ears are designed to secure the unit in the rack, NOT to support the full weight of the unit.


Attention should be given to the internal rack environment to insure the unit operates within it's specified operating temperature range of 0 to 50 deg. C also noting that the unit relies upon convection for cooling, so there should be sufficient air flow to accommodate this.

3.3. Power Connection

Power is supplied by connecting the supplied ac power cable to and AC source, at 120 or 230 V AC, +/-15%. The AC input is a universal input – no range switching is required.

3.4. Input/Output Connections (Standard Configuration)

BNC connectors are provided for the standard **ptf** 1208A outputs.

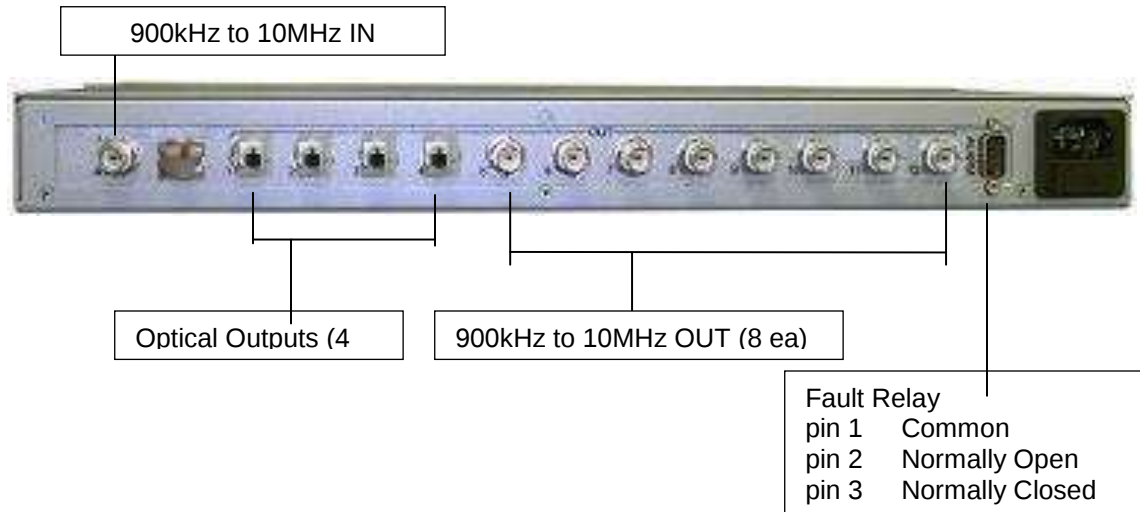

4. **ptf** 1208A – Operation

Operation of the **ptf** 1208A is extremely straightforward. Once all of the required input and output connections have been made power can be applied for the unit.

Note that an additional “feed thru” input connector is provided so that if it is desired to drive more than one ptf 1208A distribution amplifier from the same input signal, the input can be coupled to the next unit.

In this case, the units that the signal is “fed thru” should not be terminated at the input (see input termination switch). Only the last unit in the chain should be terminated to optimize impedance matching.

5. Maintenance

5.1. Overview

The ***ptf*** 1208A distribution amplifier uses state-of-the art solid state and semi-conductor, primarily surface mount, components.

All of the components are selected for their inherent high reliability, and as advanced techniques with highly sophisticated equipment, are used for assembly and test of the unit.

Due to the above, no periodic maintenance of the unit is required and the units can be expected to deliver many years of trouble free operation.

Any maintenance or service of the unit should be performed at a Precise Time and Frequency, LLC. authorized facility, to insure the appropriate equipment and expertise is available.

6. Contact Information – Technical Assistance

The Precise Time and Frequency, LLC service department normal hours of operation are from Monday to Friday, between the hours of 8.00 a.m. and 4.30 p.m. US Eastern Standard Time.

24 hour, 7-day technical assistance is available under special contract.

Before returning any equipment for service or repair please contact our service department for an RMA number.

Tel: (+1) 781 245 9090

Fax: (+1) 781 245 9099

E-mail: service@ptfinc.com

Shipping address is:

Precise Time and Frequency, LLC.
50L Audubon Road
Wakefield, MA 01880
USA

Attn: Service Manager

Billing address is:

Precise Time and Frequency, LLC.
50L Audubon Road
Wakefield, MA 01880
USA

Attn: Accounts